











LOWEPRO NAPOLI SERIES MATRIX 2008






		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Argus	DC-6340		•		
	QC-5340			•	
BenQ	C840			•	
	DC C1050			•	
	DC C530			•	
	DC C630			•	
	DC C740i			•	
	DC C750			•	
	DC C820		•		
	DC C850			•	
	DC E100			•	
	DC E520+		•		
	DC E600		•		
	DC E800		•		
	DC X600	•			
Canon	Digital IXUS 80		•		
	IXUS 70		•		
	IXY Digital 820IS		•		
	PowerShot A540/A550/A560				•
	PowerShot A570 IS				•
	PowerShot A580				•
	PowerShot A590 IS				•
	PowerShot A700				•
	PowerShot SD 600/Digital IXUS 60		•		
	PowerShot SD 630/Digital IXUS 65		•		
	PowerShot SD1000/IXUS 70	•			
	PowerShot SD1100 IS		•		
	PowerShot SD40/Ixus i7		•		
	PowerShot SD700 IS/Digital IXUS 800 IS		•		
	PowerShot SD750/IXUS 75	•			
	PowerShot SD770/IXUS 85		•		
	PowerShot SD790/IXUS 90	•			
	PowerShot SD800 IS/Digital IXUS 850 IS			•	
	PowerShot SD850 IS/IXUS 950 IS			•	
	PowerShot SD870 IS/IXUS 860 IS		•		
	PowerShot SD890 IS/IXUS 970 IS			•	
	PowerShot SD900 IS/Digital IXUS 900 Ti		•		
	PowerShot SD950 IS/Digital IXUS 960 IS			•	
	PowerShot TX-1				•
	SD850IS/Ixus 950IS		•		

*Availability may vary by country or location

LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Casio	EXILIM EX-S10		•		
	EXILIM EX-S770		•		
	EXILIM EX-S880			•	
	EXILIM EX-V7/V8			•	
	EXILIM EX-Z100		•		
	EXILIM EX-Z1000			•	
	EXILIM EX-Z1050			•	
	EXILIM EX-Z1080		•		
	EXILIM EX-Z11		•		
	EXILIM EX-Z1200		•		
	EXILIM EX-Z200		•		
	EXILIM EX-Z60	•			
	EXILIM EX-Z600	•			
	EXILIM EX-Z7	•			
	EXILIM EX-Z70	•			
	EXILIM EX-Z700	•			
	EXILIM EX-Z75	•			
	EXILIM EX-Z77	•			
	EXILIM EX-Z8			•	
	EXILIM EX-Z80		•		
EXILIM EX-Z850		•			
EXILIM EX-Z9		•			
Concord	Eye-Q 5345Z			•	
DXG	110			•	
	305V				•
	568				•
Fuji	FinePix A610			•	
	FinePix A700			•	
	FinePix A800			•	
	FinePix A820/A825/A900			•	
	FinePix A920			•	
	FinePix F100fd			•	
	FinePix F31fd			•	
	FinePix F40fd			•	
	FinePix F470		•		
	FinePix F47fd			•	
	FinePix F480			•	
	FinePix F50fd		•		
	FinePix J10		•		
	FinePix J50		•		
	FinePix V10			•	
	FinePix Z10fd/Z100fd		•		
	FinePix Z20fd		•		
	FinePix Z3		•		
	FinePix Z5fd		•		
	GE	A730			






LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Minox	DC 7022		•		
	DC-6211		•		
	DC-8011		•		
Mustek	GSmart D35			•	
Nikon	Coolpix L10/L11/L12			•	
	Coolpix L14/L15			•	
	Coolpix L16/L18			•	
	Coolpix L2, L3, L4			•	
	Coolpix L5				•
	Coolpix L6			•	
	Coolpix P1				•
	Coolpix P2				•
	Coolpix P3, P4			•	
	Coolpix P50				•
	Coolpix S200	•			
	Coolpix S210	•			
	Coolpix S5		•		
	Coolpix S50/S50c		•		
	Coolpix S500		•		
	Coolpix S51/S51c		•		
	Coolpix S510		•		
	Coolpix S52		•		
	Coolpix S520		•		
	Coolpix S52c		•		
	Coolpix S550		•		
	Coolpix S600		•		
	Coolpix S700		•		
	Coolpix S8		•		
	Coolpix S9		•		




LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Olympus	FE-115				•
	FE-130			•	
	FE-140			•	
	FE-150		•		
	FE-170/270			•	
	FE-180			•	
	FE-190			•	
	FE-200		•		
	FE-210			•	
	FE-230/240/250	•			
	FE-280		•		
	FE-290			•	
	FE-300		•		
	FE-310			•	
	FE-320		•		
	FE-350			•	
	SP-320				•
	Stylus 1000/Mju Digital 1000		•		
	Stylus 1030SW			•	
	Stylus 1200/Mju Digital 1200		•		
	Stylus 700		•		
	Stylus 710		•		
	Stylus 720SW		•		
	Stylus 725AW		•		
	Stylus 730/Mju Digital 730			•	
	Stylus 740/Mju Digital 740		•		
	Stylus 750/Mju Digital 750		•		
	Stylus 760/Mju Digital 760			•	
	Stylus 770SW		•		
	Stylus 780		•		
	Stylus 790SW/Mju 790SW			•	
	Stylus 810/Mju Digital 810			•	
	Stylus 820/Mju Digital 820			•	
	Stylus 830/Mju Digital 830			•	
	Stylus 840		•		
	Stylus 850SW			•	
	X775			•	






LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Panasonic	Lumix DMC- FX07		•		
	Lumix DMC-FS20			•	
	Lumix DMC-FS3/FS5			•	
	Lumix DMC-FX10/FX12		•		
	Lumix DMC-FX100			•	
	Lumix DMC-FX3		•		
	Lumix DMC-FX30		•		
	Lumix DMC-FX33		•		
	Lumix DMC-FX35		•		
	Lumix DMC-FX500			•	
	Lumix DMC-FX55		•		
	Lumix DMC-LS60/LS75			•	
Lumix DMC-LS80			•		
Pentax	Optio A10		•		
	Optio A20		•		
	Optio A30		•		
	Optio A40		•		
	Optio E10			•	
	Optio E20			•	
	Optio E30			•	
	Optio E40			•	
	Optio E50			•	
	Optio L20	•			
	Optio L30		•		
	Optio M10			•	
	Optio M20		•		
	Optio M30		•		
	Optio M40		•		
	Optio M50			•	
	Optio S10		•		
	Optio S12	•			
	Optio S7	•			
	Optio T10		•		
Optio T30		•			
Optio V10		•			
Optio Z10			•		
Polaroid	A310			•	
	i533P		•		
	i631			•	
	i633			•	
	i733			•	
	i832W			•	
Ricoh	Caplio R30		•		
	Caplio R40		•		
	Caplio R5		•		
	Caplio R7			•	
	Caplio RR770			•	

LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30	
Rollei	da5324			•		
	Prego da6			•		
	Prego dp4200		•			
	Prego dp5300/6300				•	
	Prego dp6200		•			
	Prego dp6500			•		
Samsung	Digimax i6 PSP		•			
	Digimax i7			•		
	Digimax i70		•			
	Digimax i8	•				
	Digimax i85			•		
	Digimax L100/110/200/210	•				
	Digimax L60		•			
	Digimax L70			•		
	Digimax L700		•			
	Digimax L730		•			
	Digimax S1000			•		
	Digimax S500/S600/S800			•		
	Digimax S700			•		
	L73		•			
	L730		•			
	L77		•			
	L830		•			
	L83T		•			
	NV24HD			•		
	NV3		•			
	NV30/NV40		•			
	NV4		•			
	NV8/10/15/20			•		
	S630/S730				•	
	S760/S860			•		
	S830/S1030			•		
	SC-M105		•			
	SC-X105L			•		
	Sanyo	DSC-S5 Xacti			•	
		Xacti VPC-CG65				•
		Xacti VPC-S50		•		
		Xacti VPS-T700	•			

LOWEPRO NAPOLI SERIES MATRIX 2008

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Sony	DSC-G1				•
	DSC-N2		•		
	DSC-S500			•	
	DSC-S650/S700/S800			•	
	DSC-S730			•	
	DSC-S750/S780		•		
	DSC-T10	•			
	DSC-T100	•			
	DSC-T2	•			
	DSC-T20	•			
	DSC-T200		•		
	DSC-T30		•		
	DSC-T300		•		
	DSC-T33		•		
	DSC-T50		•		
	DSC-T70		•		
	DSC-W100			•	
	DSC-W115/W125		•		
	DSC-W120/W130		•		
	DSC-W150/W170		•		
	DSC-W200			•	
	DSC-W30/W35/W50/W55/W70/W80/W85/W90		•		
	DSC-W300			•	
Vivitar	V3105		•		
	V3315				•
	V3345/3355		•		
	V3650			•	
	V3695				•
	V3750			•	
	V3826				•
	V5388			•	
	V6300			•	
	V6320			•	
	V7310			•	
	Vivicam 10				•
	Vivicam 25		•	•	
	Vivicam 3780	•			
	Vivicam 4345			•	
	Vivicam 5385			•	